

Operating Instructions

Retractable Flap Barrier MPR 112

Doc-ID: 5817,5722

Version: 01

Original Operating Instructions

MAGNETIC Autocontrol GmbH Grienmatt 20 79650 Schopfheim Germany

Tel.: +49 (0)7622 695 5 Fax.: +49 (0)7622 695 602 E-Mail: info@ac-magnetic.com Internet: www.ac-magnetic.com





1	Gene	eral	7				
	1.1	Information regarding the operating instructions	7				
	1.2	Pictogram explanation	8				
	1.3	Limitation of liability9					
	1.4	Copyright protection	9				
	1.5	Scope of delivery	10				
	1.6	Warranty	10				
	1.7	Disclaimer	10				
	1.8	Customer service	10				
	1.9	EC-Declaration of conformity/Manufacturer's declaration	11				
	1.10	Environmental protection	11				
2	Safe	ty	12				
	2.1	Intended use	12				
	2.2	Changes and modifications	12				
	2.3	Operating personnel	13				
		2.3.1 Requirements	13				
	2.4	Personal protective equipment14					
	2.5 Occupational safety and special dangers						
		2.5.1 Danger pictograms on the barrier modules	14				
		2.5.2 Hazard notes and occupational safety	15				
3	Ident	tification	19				
	3.1	Type plate	19				
	3.2	Type code	20				
	3.3	Definitions	21				
4	Tech	nical data	22				
	4.1	Dimensions	22				
	4.2	Electrical connection	23				
	4.3	Operating conditions	23				
	4.4	Performance data	23				
	4.5	Weight	24				
		4.5.1 Housing width 200 mm (Standard)	24				
		4.5.2 Housing width 280 mm (Wide)	24				
5	Desi	gn and function	25				
	5.1	Design	25				
	5.2	Lane configuration2					
	5.3	Function	27				
	5.4	Control system	28				
	5.5	Control and display elements					
		5.5.1 Gate End Display (GED)	28				



6	Tran	sport an	d storage	29
	6.1	Safety i	notes for transport	29
	6.2	Transpo	ort inspection	30
	6.3	Transpo	ort	31
	6.4	Storage)	31
7	Asse	embly an	d installation	32
	7.1	Safety.		32
	7.2	Require	ed steps	34
	7.3	Founda	tion and empty conduits	34
	7.4	Unpack	ing	36
	7.5	Access	doors	36
	7.6	Assemi	oly on the foundation	36
	7.7	Post-ins	stallation check	37
8	Elec	trical co	nnection	38
	8.1	Safety.		38
	8.2	Installin	g electrical protective devices	40
	8.3	Electric	al connection	40
	8.4	Connec	cting customer's control wiring (MBC-110)	42
		8.4.1	Digital inputs	44
		8.4.2	Connecting emergency input	45
		8.4.3	Relay outputs	47
		8.4.4	MOSFet outputs	48
	8.5		g access-control devices	
	8.6	Post-ins	stallation check	48
9	Conf	figuratio	n of pedestrian barrier	49
	9.1	Safety.		49
	9.2	Configu	rring the pedestrian barrier	50
		9.2.1	DIP switch block S1	51
		9.2.2	DIP switch block S2	53
	9.3	Selectir	ng the operating mode	54
		9.3.1	Emergency	55
		9.3.2	Out-of-service mode	55
		9.3.3	Controlled entry mode	
		9.3.4	Controlled exit mode	
		9.3.5	Bidirectional mode	57
		9.3.6	Free entry mode	
		9.3.7	Free exit mode	
		9.3.8	Free entry, controlled exit mode	
		9.3.9	Free exit, controlled entry mode	59
		9.3.10	Fully free mode	59
	9.4	Unauth	orised access attempts	60



		9.4.1	Attempted unauthorised following (tailgati	
		9.4.2	Unauthorised access in the blocked direct	tion
		9.4.3	Unauthorised presence of a person	
10	Start	-up and o	peration	61
	10.1	Safety	61	
	10.2	Start-up	62	
	10.3	Operatio	n	62
		10.3.1	Switching on and off the pedestrian barrie	r62
	10.4	Program	mode MPR	63
	10.5	Normal o	pperation	64
		10.5.1	Power-off state	64
		10.5.2	Reference run (homing)	64
		10.5.3	Normal operation without pulse storage	64
		10.5.4	Normal operation with pulse storage	65
	10.6	Special of	cases within motion sequence	65
		10.6.1	Obstruction detection	65
		10.6.2	Attempted break-in	65
		10.6.3	Emergency situation	65
11	Main	tenance .		66
	11.1	Safety	66	
	11.2	Cleaning	ı 67	
	11.3	Maintena	ance schedule	69
12	Malfu	ınctions.		70
	12.1	Malfunct	ion table – Pedestrian barriers	70
	12.2	Malfunct	ion – Logic controller MBC-110	72
		12.2.1	Display of the error codes at the MBC-110	
		12.2.2	Display of the software version of the MBG	ე-
			110	73
		12.2.3	Error codes of the MBC-110	
	12.3		addressing and termination	
	12.4	Malfunct	ion – Motor controller MMC-120	77
13	Repa	ir		80
	13.1	Safety	80	
	13.2	Spare pa	arts	82
	13.3	Changin	g motor controller MMC-120	82
	13.4	Changin	g logic controller MBC-110	83
	13.5		ding or updating software to the MBC-110 ocontrollers	
14	Deco	mmissio	ning and disposal	85
15	EC-D	eclaratio	n of conformity	86



16	Appendix					
	16.1	Wiring diagram	. 87			
Ind	ex		. 88			



1 General

1.1 Information regarding the operating instructions

These operating instructions provide crucial information on handling of MAGNETIC pedestrian barrier MPR 112. Pre-requisite for safe working is the observance of all specified safety notes and instructions.

In addition, the local accident prevention regulations valid at the barrier's area of application and general safety regulations have to be complied with.

Carefully read the operating instructions before starting any work! They are a product component and must be kept in direct proximity of the barrier, well accessible to the personnel at all times.

When passing the barrier on to third parties, the operating instructions must also be handed over.

Components from other suppliers may have their own safety regulations and instructions for use. These must also be observed.

General



1.2 Pictogram explanation

Warning notes

Warning notes are characterised by pictograms in these operating instructions. The warning notes are prelude by signal words expressing the scale of the hazard.

It is absolutely essential to observe the notes and to proceed with caution in order to prevent accidents as well as bodily injuries and property damage.

▲ DANGER!



DANGER!

... points to an immediately dangerous situation, which leads to death or severe injuries if it is not avoided.

A WARNING!



WARNING!

... points to a potentially dangerous situation, which can lead to death or severe injuries if it is not avoided.

A CAUTION!



CAUTION!

... points to a potentially dangerous situation, which can lead to minor injuries if it is not avoided.

NOTICE!



NOTICE!

... points to a potentially harmful situation, which can lead to property damage if it is not avoided.

Hints and recommendations



NOTE!

... highlights useful hints and recommendations as well as information for an efficient and trouble-free operation.



1.3 Limitation of liability

All specifications and notes in these operating instructions were compiled with consideration to the valid standards and regulations, the state of the art as well as to our long-standing knowledge and experience.

The manufacturer is not liable for damages caused by:

- Non-observance of the operating instructions
- Improper use
- Deployment of non-trained personnel
- Arbitrary modifications
- Technical changes
- Use of non-approved spare and wear parts.

The actual scope of supply may differ from the explanations and illustrations described in this manual in case of special designs, if additional order options are made use of, or due to latest technical changes.

1.4 Copyright protection

Surrendering the operating instructions to third parties without written permission of the manufacturer is not permitted.



NOTE!

Content details, texts, drawings, pictures and other illustrations are protected by copyright and are subject to industrial property rights. Any improper use shall be liable to prosecution.

Any type and form of duplication – also of extracts – as well as the exploitation and/or communication of the contents are not permitted without the manufacturer's written declaration of consent.

General



1.5 Scope of delivery

The scope of delivery comprises:

- 1 Pedestrian barrier
- 4 Foundation anchors including accessories
- 2 Door keys.

Supplied documentation per barrier:

- 1 Operating Instructions.
- 1 Wiring diagram

1.6 Warranty

Subject to the condition that the operating instructions are observed, and that no inadmissible operations are carried out on the technical equipment, and that the installation has suffered no mechanical damage, MAGNETIC grants a warranty on all mechanical and electrical components of the product to the extend as stated in its standard terms of sales and delivery or as contractually agreed in writing.

1.7 Disclaimer

MAGNETIC expressly disclaims all implied and statutory warranties, including but not limited to, the implied warranties of merchantability and fitness for a particular purpose with respect to the product and the statutory warranty of non-infringement of third party rights set forth in section 2312(3) of the uniform commercial code.

1.8 Customer service

Our customer service can be contacted for any technical advice. Information about the responsible contact person can be retrieved by telephone, fax, E-mail or via the Internet at any time, refer to

manufacturer's address on page 2.



NOTE!

In order to enable fast handling note the data of the type plate such as type, serial number, version etc. before calling.



1.9 EC-Declaration of conformity/Manufacturer's declaration

EC-Declaration of conformity (pursuant to EC Machinery Directive 2006/42/EC, Annex II) refer to page 86.

1.10 Environmental protection

NOTICE!



NOTICE!

Danger for the environment by improper disposal of components or the pedestrian barrier!

In case of improper disposal of components or the pedestrian barrier, damage to the environment may result.

Therefore:

- Observe the valid environmental directives.
- After appropriate disassembly the parts have to be recycled.
- Separate recyclable fraction and feed to recycling.



2 Safety

2.1 Intended use

The MAGNETIC pedestrian barriers MPR are exclusively intended for managing the admission in to areas with restricted access.

The MAGNETIC universal controller MBC and MMC are exclusively intended for controlling the MAGNETIC pedestrian barrier MPR.

▲ WARNING!



WARNING! Non-intended use is dangerous!

Any use of the barriers other than intended and/or in a different manner can cause hazardous situations.

Therefore:

- Only use the pedestrian barrier and the controllers for the intended use.
- All specifications in these operating instructions have to be strictly complied with.

Any types of claims due to damage arising from improper use are excluded. The operator alone shall be responsible for any damage arising from improper use.

2.2 Changes and modifications

Changes, modifications and re-builds of the barrier modules can cause unforeseen danger.

A written authorisation of the manufacturer is absolutely required before executing any technical changes and modifications at the barrier modules, the control unit or the control program.



2.3 Operating personnel

2.3.1 Requirements

▲ WARNING!



WARNING! Risk of injury in case of inadequate qualification!

Improper handling can lead to considerable bodily injuries and property damage.

Therefore:

 Have any activities only carried out by the individuals designated for that purpose.

The operating instructions specify the following qualification requirements for the different fields of activity:

Instructed people

have been instructed during instructions provided by the operator with regard to the work assigned to them and possible hazards arising from improper conduct.

Specialised staff

is due to its technical training, knowledge and experience as well as due to its knowledge of the pertinent regulations able to carry out the work assigned to it and to independently recognise potential hazards.

Electrical specialists

are able, due to their technical training, knowledge and experiences as well as knowledge of the relevant standards and regulations, to execute tasks on electrical systems and to independently recognise possible hazards.

In Germany, the electrical specialist must fulfil the provisions of the accident prevention regulation BGV A3 (e.g. master electrician). Appropriate regulations apply in other countries. The regulations valid there must be observed.

It must be expected that only those people are deployed who carry out their work reliably. People, whose ability to respond is affected, e.g. by drugs, alcohol or medicines, may not be assigned.

Furthermore, the age and profession-specific regulations valid at the operating location must be observed when selecting personnel.

Safety



2.4 Personal protective equipment

It is necessary to wear personal protective equipment when dealing with the pedestrian barrier so as to minimise health hazards.

Before carrying out any work, properly dress the necessary protective equipment such as work clothes, protective gloves, safety shoes and wear during work.

2.5 Occupational safety and special dangers

The remaining risks resulting from the risk analysis are specified in the following section.

Observe the safety notes listed here and the warning notes mentioned in the other chapters of these instructions to reduce health hazards and to avoid dangerous situations.

2.5.1 Danger pictograms on the barrier modules

The relevant dangerous areas on the barriers can be identified by the following pictograms:

Electric voltage

▲ DANGER!



DANGER! Mortal danger by electric voltage!

... indicates life threatening situations caused by electric voltage. Non-observance of the safety instructions causes severe injuries or death. Necessary work may only be carried out by an electrical specialist.

This pictogram is fixed on the following components:

- Mounting plates with electrical components.

Hot surfaces





CAUTION! Danger of burns!

... indicates the presence of a hot surface. Nonobservance of the safety instructions can lead to minor injuries.

This pictogram is fixed on the following component:

Transformer.



Risk of crushing

▲ CAUTION!



CAUTION! Danger of crushing!

... indicates the presence of components and items moving towards each other. Non-observance of the safety instructions can lead to minor injuries.

This pictogram is fixed on the following components:

- Drive units.

2.5.2 Hazard notes and occupational safety

For your own safety and for the protections of the barrier modules, the following information must be observed and complied with:

Electric voltage

▲ DANGER!



DANGER!

Mortal danger by electric voltage!

Touching live parts can be lethal.

Damage to the insulation or to individual components can be lethal.

Therefore:

- Switch off the power supply immediately in case of damage to the insulation and arrange repair.
- Only electrical specialists may carry out work on the electrical system.
- Switch off power supply and secure against reactivation before performing any work. Test for absence of voltage!
- Never bypass or deactivate fuses.
- When replacing fuses observe the correct amperage specification.
- Keep moisture and dust away from live parts.
 Moisture or dust may cause a short circuit.

Safety



Electric voltage – Missing protective facilities

▲ DANGER!



DANGER! Mortal danger by electric voltage!

The safety installations that are required according to regional and local regulations must be provided by the customer. Usually these are:

- Residual current device (RCD)
- Circuit-breaker
- Lockable 2-pole main switch according to EN 60947-3.

Improper transport

▲ WARNING!



WARNING!

Danger by falling down or tilting of a barrier module!

The weight of the barrier modules can severely injure a person and cause severe crushing!

Therefore

- Have the barrier modules transported by specialists only.
- Use lifting gear or forklift with a suitable pallet.
- Use suitable lifting gear (loops, etc.) for lifting the barrier modules. The lifting gear must be designed for the respective weights.
- Carrying and lifting the barrier modules from the pallet should be done by at least two people.

Heavy weight

WARNING!



WARNING!

Risk of injury when lifting heavy objects alone!

The weight of heavy objects can severely injure a person!

Therefore:

 Carrying and lifting the barrier modules from the pallet should be done by at least two people.



Insufficient fixing

A WARNING!



WARNING! Risk of injury at insufficient fixing!

Insufficient fixing at the barrier modules or any single component at e.g. the flaps can severely injure a person and cause severe crushing!

Therefore:

- Only qualified and skilled personnel are allowed to assemble the barrier modules and the appropriate components.
- Check the foundation anchors fit tightly before starting the barrier.
- Check the firm fixing of all screws according to maintenance schedule.

Inadmissible operation

WARNING!



WARNING!

Danger from improper operation of the pedestrian barrier!

Improper operation of the pedestrian barrier can cause severe or lethal injuries!

Therefore:

- Before operating the pedestrian barriers check all electrical and mechanical functions.
- Only qualified and skilled personnel are allowed to operate the pedestrian barrier.

Sharp edges and spiky corners

▲ CAUTION!



CAUTION!

Danger of injury on edges and corners!

Sharp edges and spiky corners can cause skin abrasions and cuts.

Therefore:

- Work carefully near to sharp edges and spiky corners.
- In case of doubt wear protective gloves.

Safety



Illegible signage





CAUTION! Risk of injury by illegible symbols!

Labels and signs can become dirty or unrecognisable in the course of time.

Therefore:


- Always keep safety, warning and operating notes in a well readable condition.
- Immediately renew damaged or unrecognisable signs or labels.



3 Identification

3.1 Type plate

The type plate is provided on the upper part of the mounting plates.

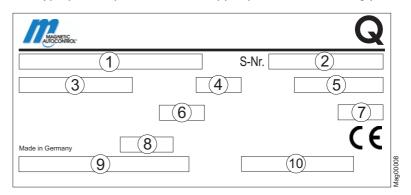

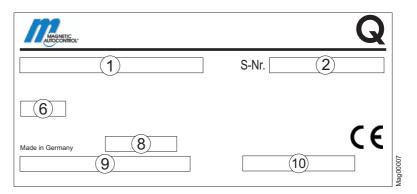


Fig. 1: Top: Type plate of the End module, Center module, Transition module Standard / Wide and Transition module Wide / Standard; Bottom: Type plate of the Basic module

- 1 Type code
- 2 Serial number
- 3 Power supply, Frequency
- 4 Current consumption
- 5 Power consumption
- 6 Protection class
- 7 Duty cycle
- 8 Year of manufacture
- 9 Bar code for type code
- 10 Bar code for serial number

Identification



3.2 Type code

М	Р	R	-	1	2	2	Α	-	Α	1 (0) -	XXXXX	
1	1				1		1							Options
														Customer or project code, etc.
														Hosing
														0 Narrow (200 mm) lane width 520 / gap 50 mm 1 Middle (250 mm) lane width 520 / gap 50 mm 2 Wide (280 mm) lane width 520 / gap 50 mm 3 Narrow (200 mm) lane width 550 / gap 50 mm 4 Narrow (200 mm) lane width 600 / gap 50 mm 5 Wide (280 mm) lane width 900 / gap 50 mm 6 Wide (280 mm) lane width 800 / gap 50 mm
														Material
														0 Powder-coated 1 Stainless steel AISI 304 2 Stainless steel AISI 316 3 Stainless chromium steel 3 Stainless chromium steel, powder-coated
														Flap
														 Soft flap single Soft flap telescopic Acrylic flap single Soft flap single to soft flap telescopic Acrylic flap single to soft flap telescopic Telescopic to telescopic
														Voltage
														A 230 V / 50 Hz B 115 V / 60 Hz
														Module
														A End module left B End module right
														C Center module left
														D Center module right E Transition module right 520 / 960 mm
														F Transition module left 520 / 960 mm
														G Transition module right 520 / 900 mm H Transition module left 520 / 900 mm
														I Transition module right 550 / 960 mm
														K Transition module left 550 / 960 mm
														L Transition module right 550 / 900 mm M Transition module left 550 / 900 mm
														N Transition module right 600 / 960 mm
														O Transition module left 600 / 960 mm
														P Transition module right 600 / 900 mm Q Transition module left 600 / 900 mm
														R Transition module right 520 / 800 mm
														S Transition module left 520 / 800 mm
														Drive type
														Standard drive motorOther drive versions
														Housing size
														1 Short housing, both sided 2 Long housing, both sided
														Generation
				Ш										Product type
														R Retractable flap barrier
														Product group
	<u> </u>													P Pedestrian
														Product classification
														M MAGNETIC product



Identification

3.3 Definitions

Calculation the lane width

The lane width is calculates as follows:

- Lane with = 2 x extended flap width + gap between the flaps
- Gap between the flaps: 50 mm or 80 mm

Fig. 2: Definition – Right (short distance) and left (long distance)

"Right" and "Left" are defined by the position of the motor to the shorter housing side as shown in Fig. 2.

Technical data



4 Technical data

4.1 Dimensions

The Retractable flap barrier MPR is offered in three different housings and lane widths with different types of flaps and flap materials. The available housing widths are 200 mm, 250 mm and 280 mm. The standard lane widths are 520 mm, 960 mm or 990 mm.

Fig. 3: Dimensions – Housing width 200 mm / 250 mm / 280 mm (Standard)

Designation	Unit	Value		
		MPR-112A/B- A2XO	MPR-112A/B- A3X1	MPR-112A/B- A2X2
Length	mm	1300	1300	1300
Width	mm	200	250	280
Height	mm	1035	1035	1035

Table 1: Dimensions



4.2 Electrical connection

Designation	Unit		Value			
		MPR-112A/B- A2XO	MPR-112A/B- A3X1	MPR-112A/B- A2X2		
Supply voltage	V AC / Hz	1	15 to 240 / 50 to 6	0		
Current consumption: Pedestrian barrier open/close	А	0.3	0.3	0.47		
Max. current consumption: Pedestrian barrier in motion (30 ms)	A	0.85	0.85	3.4		
Power consumption: Pedestrian barrier open/close	W	40	35	80		
Max. power consumption: Pedestrian barrier in motion (30 ms)	W	140	140	654		
Duty cycle	%		100			
Control voltage	V DC		42			
Control voltage	V DC		24			

Table 2: Electrical connection

4.3 Operating conditions

Designation	Unit	Value			
		MPR-112A/B- A2XO	MPR-112A/B- A3X1	MPR-112A/B- A2X2	
Ambient temperature range	℃	0 to +45			
Protection class	_	IP 32			

Table 3: Operating conditions

4.4 Performance data

Designation	Unit			
		MPR-112A/B- A2XO	MPR-112A/B- A3X1	MPR-112A/B- A2X2
Opening / Closing time	ms	400	300 ¹⁾	600

1) With acrylic-flap: 350 ms Table 4: Performance data

Technical data



4.5 Weight

4.5.1 Housing width 200 mm (Standard)

Designation	Unit	Value		
		Basic module MPR-112A	End module MPR-112B	Center module MPR-112C
Weight	kg	90	90	90

Table 5: Weight, Housing width 200 mm

4.5.2 Housing width 280 mm (Wide)

Designation	Unit	Value		
		Basic module MPR-112A	End module MPR-112B	Center module MPR-112C
Weight	kg	120	120	120

Designation	Unit	Value		
		Transition module MPR-112E	Transition module MPR-112F	
Weight	kg	120	120	

Table 6: Weight, Housing width 280 mm





5.1 Design

Fig. 4: Design pedestrian barrier

- 1 Flaps
- 2 Barrier End Display (GED)
- 3 Pedestrian barrier (module)

5.2 Lane configuration

The pedestrian barrier can be supplied in the following modules:

- Basic module
- End module
- Center module
- Transition module standard / wide
- Transition module wide / standard.

The basic module has got a slave function, the end module a master function and the others have got both, master and slave function.

For a lane, one module with slave and one with master function is always required. Each lane works independently.

The number of lanes can be expanded optionally by center and transition modules.

The following Fig. shows possible lane configurations.



Fig. 5: Lane configuration



5.3 Function

The pedestrian barrier MPR is used for a fast access control of pedestrians e.g. at the reception area of public buildings, hotels, companies or museums. With suitable roofing, it can be used out of doors, e.g. in sports stadiums.

The modular system permits numerous different lane configurations.

Basically, the pedestrian barrier can be used in both directions. In multi-lane installations with high throughput rates, the entry and exit lanes can also be configured for one-way passage.

In its normal state, the pedestrian barrier is closed. The flaps only open after authorisation from an external command unit, such as a card reader.

Attempted cheating by unauthorised persons, e.g. passage in the wrong direction, or an attempt by a second person to follow without authorisation (tailgating) is recognised and activates the alarm system. Recognition in such cases is by several infrared light barriers.

With MHTM direct drive technology, the flaps can be blocked in any position, e.g. by hand. No slipping clutches or similar devices are required.

In the event of a power failure, the flaps are opened automatically by springs.



5.4 Control system

Two motor controllers MMC-120 are connected by a CAN bus to the MBC-110 logic controller.

A total of 6 infrared light barriers and two barrier end displays are connected to digital inputs and outputs.

For the customer, there are digital inputs to open the pedestrian barrier, e.g. for a card reader, and an emergency input. From relay outputs various feedback messages are available for the customer.

The power supply for the controllers is provided by a transformer power supply with two output voltages, 30 VDC and 42 VDC.

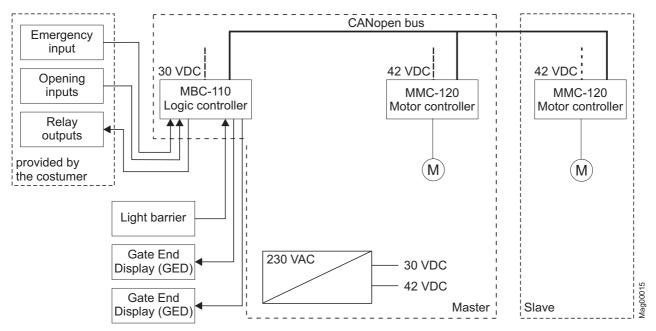


Fig. 6: Block diagram control system (Example with one MBC-110)

5.5 Control and display elements

5.5.1 Gate End Display (GED)

The Gate End Display shows the passage direction in which the pedestrian barrier may be used. Basic- and end modules are each equipped with one Gate End Display, center and transition modules are each equipped with two Gate End Displays.

Position	Description
Green arrow	Passage is permitted.
Red cross	Passage is blocked.

Table 7: Barrier End Display





6 Transport and storage

6.1 Safety notes for transport

Improper transport

▲ WARNING!



WARNING!

Danger by falling down or tilting of a barrier module!

The weight of the barrier modules can severely injure a person and cause severe crushing!

Therefore:

- Have the barrier modules transported by specialists only.
- Use lifting gear or forklift with a suitable pallet.
- Use suitable lifting gear (loops, etc.) for lifting the barrier modules. The lifting gear must be designed for the respective weights.
- Carrying and lifting the barrier modules from the pallet should be done by at least two people.

Heavy weight

WARNING!



WARNING!

Risk of injury when lifting heavy objects alone!

The weight of heavy objects can severely injure a person!

Therefore:

 Carrying and lifting the barrier modules from the pallet should be done by at least two people.

Transport and storage



Improper transport

NOTICE!



NOTICE!

The pedestrian barrier can be damaged by improper transport!

Substantial material damages can result from improper transport.

Therefore:

- Have the barrier modules transported by specialists only.
- When unloading the packages and during inplant transportation always proceed with greatest care and caution.
- Observe the symbols on the packaging.
- Observe the dimensions of the barrier system.
- Loading, unloading as well as moving the barrier system must take place with greatest care.
- Only remove packaging directly before assembly.

Personal protective equipment

The following must be worn during all transport work:

- Work clothes
- Protective gloves
- Safety shoes.

6.2 Transport inspection

Immediately check the delivery after receipt for completeness and transport damages.

Proceed as follows in the case of outwardly recognisable transport damage:

- Do not accept the delivery or only under reserve.
- Note the extent of damage on the transport documents or on the delivery note of the forwarder.
- Lodge complaint.



NOTE!

Lodge a complaint for each defect, as soon as it is recognised. Compensation claims can only be submitted within the valid complaint periods.



Transport and storage

6.3 Transport

The pedestrian barriers arrive finally assembled.

The lifting gear must be designed for the weight of the barrier module.

For transport barrier modules consider the safety notes on page 29, chapter 6.1.

For future transports:

- Secure loose cables.
- Secure against vibrations.
- Securely fasten the barrier module prior to transport (e.g. screw it onto a pallet).
- Transport and put down pedestrian barrier with a forklift and lift with suitable lifting gear.

6.4 Storage

Store pedestrian barriers or packages under the following conditions:

- Do not store outdoors.
- Store dry and dust free.
- Do not expose to aggressive media.
- Protect against solar irradiation.
- Avoid mechanical vibrations.
- Storage temperature: -10 to +60 °C
- Relative humidity: max. 95 %, non-condensing
- Regularly check the general condition of all parts and packaging, if stored for longer than 3 months.



7 Assembly and installation

7.1 Safety

General

A WARNING!



WARNING! Danger by inappropriate installation!

Inappropriate installation can cause severe injuries! Therefore:

- Only qualified personnel, authorised by the operator and instructed appropriately, may carry out installation tasks.
- Before beginning work, ensure that there is sufficient assembly space.
- Pay attention to tidiness and cleanness at the assembly site! Loosely stacked or discarded components and tools are accident sources.
- Ensure correct arrangement and correct fit on the components.
- Install all fastening elements correctly.

Improper transport





WARNING!

Danger by falling down or tilting of a barrier module!

The weight of the barrier modules can severely injure a person and cause severe crushing!

Therefore

- Have the barrier modules transported by specialists only.
- Use lifting gear or forklift with a suitable pallet.
- Use suitable lifting gear (loops, etc.) for lifting the barrier modules. The lifting gear must be designed for the respective weights.
- Carrying and lifting the barrier modules from the pallet should be done by at least two people.



Heavy weight

▲ WARNING!



WARNING!

Risk of injury when lifting heavy objects alone!

The weight of heavy objects can severely injure a person!

Therefore:

 Carrying and lifting the barrier modules from the pallet should be done by at least two people.

Improper transport

NOTICE!



NOTICE!

The pedestrian barrier can be damaged by improper transport!

Substantial material damages can result from improper transport.

Therefore:

- Have the barrier modules transported by specialists only.
- When unloading the packages and during inplant transportation always proceed with greatest care and caution.
- Observe the symbols on the packaging.
- Observe the dimensions of the barrier system.
- Loading, unloading as well as moving the barrier system must take place with greatest care.
- Only remove packaging directly before assembly.

Personal protective equipment

The following must be worn during all assembly and installation work:

- Work clothes
- Protective gloves
- Safety shoes.

Special tools

Following special tools are required for assembly and installation works:

■ Torque wrench (18 Nm)



7.2 Required steps

The following procedures have to be observed during assembly and installation:

- Laying the foundation
- Installing the empty conduits
- Unpacking the pedestrian barrier
- Mounting the pedestrian barrier on the foundation
- Connect pedestrian barrier electrically, wire modules.
- Assemble housing.

7.3 Foundation and empty conduits

Before assembling the pedestrian barrier a foundation has to be laid and empty conduits have to be installed.



NOTE!

To provide a trouble-free operation use separate conduits for data cables and mains cables.

Foundation

The foundation must meet the following requirements:

- have sufficient load-carrying capacity.
- have a skid-proof surface.
- be level and horizontal
- have sufficient thickness for the fastenings.

Empty conduits

Observe the following during planning and installing of the empty conduits:

- Install empty conduits according to the foundation plan.
 - \rightarrow See page 19, Fehler! Verweisquelle konnte nicht gefunden werden..
 - Install 2 conduits between each module.
 - Install a conduit for each module with master function for the mains cables.
- Additional cabling for access control and other peripheral equipment is the customer's responsibility.
- Conduits have to be planned to a sufficient length.



Fig. 7: Foundation

- 1 Pedestrian barrier
- Foundation anchors M12x156, borehole average 12 mm, drilling depth 145 mm
- 3 Have cables overlapping for approx. 1 m of the conduits
- 4 Conduit for mains cable and data line
 - Foundation level and horizontal
 Concrete or appropriate continuous industrial floor.
 In case of flagging make sure that the anchor bolts are secured firmly in the foundation. If necessary, use longer bolts.

Fig. 8: Foundation plan and layout for empty conduits

- 1 Alternative external electric supply, PG21 (28 mm)
- 2 Conduit for alternative electric supply, internal electric supply, PG21 (28 mm)
- 3 Ductwork control line, PG36 (42 mm)
- 4 Conduit electric supply external, PG21 (28 mm)

Borehole diameter: 12 mm, drilling depth: 145 mm

Put data lines and mains cables into separate conduits.

Fig. 9: Foundation plan, arrangement with different housing and passage widths

Fig. 10: Foundation plan, arrangement with different housing and passage widths



7.4 Unpacking

The individual packages are packed according to the expected transport conditions. Only environment-friendly materials have been used for the packaging.

The packaging should protect the individual components against transport damages, corrosion, etc up to the assembly. Therefore do not destroy the packaging and remove only directly before assembly.

- 1. Unpack the pedestrian barrier.
- 2. Align pedestrian barrier upright.
- 3. Separate material according to type and size and continue to use them after recycling.

7.5 Access doors

The motor as well as the drive and control units are located behind the hinged housing doors. Access is granted to authorized people by using the key supplied with the retractable flap barrier.

Fig. 11: Access to drive and controller units

7.6 Assembly on the foundation

Risk of crushing

A CAUTION!



CAUTION!

Danger of crushing!

In certain circumstances a finger can be crushed when opening a flap.

Therefore:

- If the basic or the end module is directly placed at a wall, pay attention that there is a minimum distance of 25 mm between the flap edge and the wall while the flap is open.
- 1. The foundation has been set to the adequate hardness.
- 2. Drill holes for the foundation anchors according to the foundation plan.
 - \blacksquare \rightarrow See page 35, Fig. 8.
 - Ensure that the pedestrian barrier is in line.
- 3. Position barrier modules on the foundation.
- 4. The pedestrian barrier is fixed by six foundation anchors to the ground frame onto the foundation. The mounting material is included in delivery.



Assembly and installation

Fig. 12: Mounting pedestrian barrier on the foundation

- 1 MPR housing
- 2 Concret fundament
- 3 Nut, split washer, plain washer
- 4 Foundation anchors
- 5 U-profile

7.7 Post-installation check

The following points must be checked after assembly and installation of the pedestrian barrier:

- Are all foundation anchors firmly fixed?
- Are all screws firmly fixed?
- Have all covers been properly assembled?



8 Electrical connection

8.1 Safety

Electric voltage

A DANGER!



DANGER! Mortal danger by electric voltage!

Touching live parts can be lethal.

Damage to the insulation or to individual components can be lethal.

Therefore:

- Switch off the power supply immediately in case of damage to the insulation and arrange repair.
- Only electrical specialists may carry out work on the electrical system.
- Switch off power supply and secure against reactivation before performing any work. Test for absence of voltage!
- Never bypass or deactivate fuses.
- When replacing fuses observe the correct amperage specification.
- Keep moisture and dust away from live parts.
 Moisture or dust may cause a short circuit.

General

▲ WARNING!



WARNING!

Danger by inappropriate installation!

Inappropriate installation can causes severe injuries or lethal injuries.

Therefore:

- Only electrical specialists must perform any electrical installation tasks.
- Pay attention to tidiness and cleanness at the assembly site! Loosely stacked or lying around components and tools are accident sources.
- Tighten all screws correctly.



Hot surfaces





CAUTION! Danger of burns!

The heating unit, transformers or motors may have a hot surface. Touching these hot surfaces can lead to burns.

Therefore

- Do not touch these hot surfaces.
- After switching off the power supply wait some minutes until these components have cooled down.
- Wear protective gloves if necessary.

Electromagnetic interference

NOTICE!



NOTICE!

Electromagnetic interferences may cause malfunctions of the pedestrian barrier or adjacent devices!

The pedestrian barrier is approved for industrial, residential, commercial a business use. Operation in other electro-magnetic environmental conditions may cause interferences or malfunctions.

Therefore:

- Place control lines and mains cables into separate conduits.
- Use cables according to the electrical circuit plan.
- Only install and apply additional parts approved by MAGNETIC.
- The electrical and electronically additional parts must be EMC verified and must not exceed the indicated EMC limit values.

Personal protective equipment

The following must be worn during all installation work:

- Work clothes
- Protective gloves
- Safety shoes.



8.2 Installing electrical protective devices

The safety installations that are required according to regional and local regulations must be provided by the customer. Usually these are:

- Residual current device (RCD)
- Circuit-breaker
- Lockable 2-pole main switch acc. to EN 60947-3.

8.3 Electrical connection

The end housings must be dismantled. \rightarrow See page Fehler! Textmarke nicht definiert., chapter Fehler! Verweisquelle konnte nicht gefunden werden.

- 1. Earth system. Connect barrier modules with each other by using the earthing clamps.
- Connect the mains cable to every centre and end module according to wiring diagram. → See page 19, Fig. 14 and page 87.
- Connect low-voltage cables and data cable (CAN bus) according to wiring diagram. Use shielded cables. → See also page 41, Fig. 14.
- 4. Connect the cable shields of both ends of the shielded cables to EMC clamps on the mounting plates.

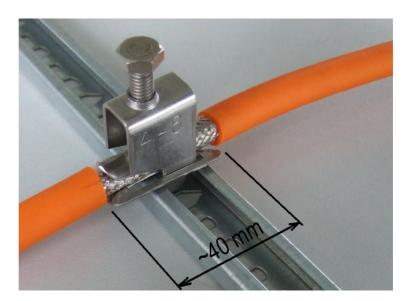


Fig. 13: Assembly EMC clamp



Fig. 14: Connections for mains supply and connecting lines



8.4 Connecting customer's control wiring (MBC-110)

The following connections are available for control and feedback on customer's side:

- 3 Digital inputs to control the pedestrian barrier.
- 6 Relays outputs to feed back information.

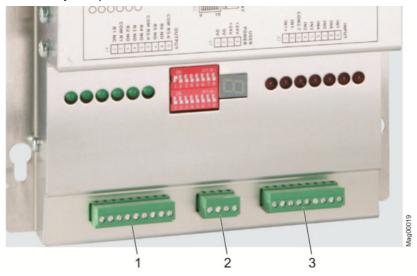


Fig. 15: Customer connections to MBC-110

- 1 Connection relay outputs, plug X1
- 2 24 V DC output, max. 300 mA, plug X7
- 3 Connection digital inputs, plug X2



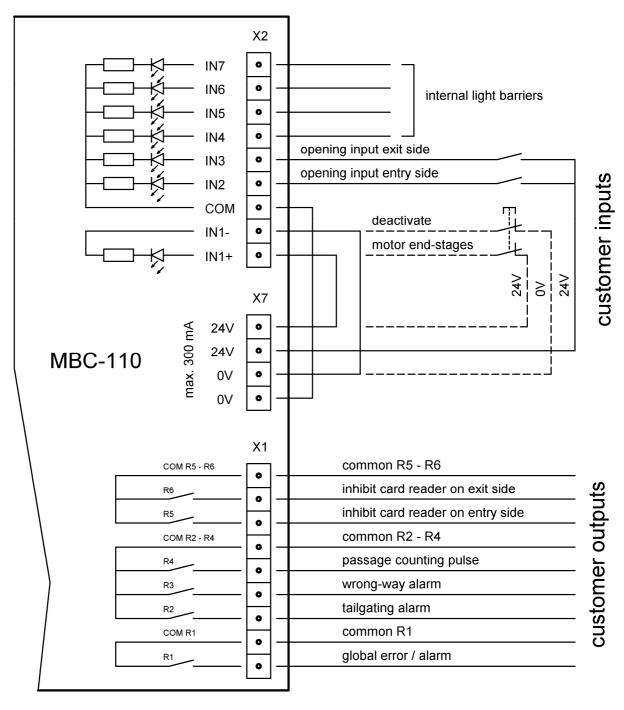


Fig. 16: MBC-110, connecting diagram customer's side



NOTE!

The maximum output current at connector X7 is limited to 300 mA by a self-resetting fuse.



8.4.1 **Digital inputs**

- All inputs galvanically isolated by optocouplers
- Input voltage 24V ± 10%
- Input current 10 mA per input
- Impulse length for inputs 100 ms to 300 ms

Input	Function	Description
1	Deactivate motor end- stages in case of emergency	This input permits to power of the motor end-stages in case of an emergency. The flaps are pulled open by springs then. The input is fail-safe, i.e. the pedestrian barrier is only operative when a continuous signal is present. → See also page 48, chapter 8.4.2.
2	Opening input entry side	At this input, the barrier can be opened by a card reader, for example, indicating a valid passage on the entry side. → See also page 48, chapter 8.4.3.
3	Opening input exit side	At this input, the barrier can be opened by a card reader, for example, indicating a valid passage on the exit side. \rightarrow See also page 48, chapter 8.4.3.
4	Light barrier LS 1	The two light barriers LS 1 and LS 2 are evaluated together to permit direction detection of a passage. They
5	Light barrier LS 2	are in front of the card reader on the entry side of the pedestrian barrier.
6	Light barrier LS 5	The two light barriers LS 5 and LS 6 are evaluated together to permit direction detection of a passage. They
7	Light barrier LS 6	are in front of the card reader on the exit side of the pedestrian barrier.
8	Safety light barrier LS 3A and LS 3B	The light barriers LS 3A and LS 3B work in parallel. They provide a security monitor close to the flaps. In combination with safety light barriers LS 4A and LS 4B, they also serve to detect a completed passage with ensuing closure of the flaps.
9	Safety light barrier LS 4A and LS 4B	The light barriers LS 4A and LS 4B work in parallel. They provide a security monitor close to the flaps. In combination with safety light barriers LS 3A and LS 3B, they also serve to detect a completed passage with ensuing closure of the flaps.

Table 8: Digital inputs



Fig. 17: Position light barriers

8.4.2 Connecting emergency input

The inputs IN1– and IN1+ are intended to be used as superior emergency opening inputs, for example for fire alarm systems. Factory setting of these inputs are defined at 0 V or 24 V by means of two wire jumpers.

Several pedestrian barriers should be interrupted at the same time by a central emergency switch:

- 1. Install a customer's 24V power supply in the external control cabinet to drive the relays.
- 2. In every pedestrian barrier install each a customer two-pole relay.
- 3. Remove wire jumpers from terminals IN1- and IN1+.
- 4. Wire emergency input according to Fig. 16 and Fig. 18.

In case that input IN1 is interrupted the motor end-stages are powered off, i.e. the motors are powerless, the flaps are opened by springs and the passage is completely free.



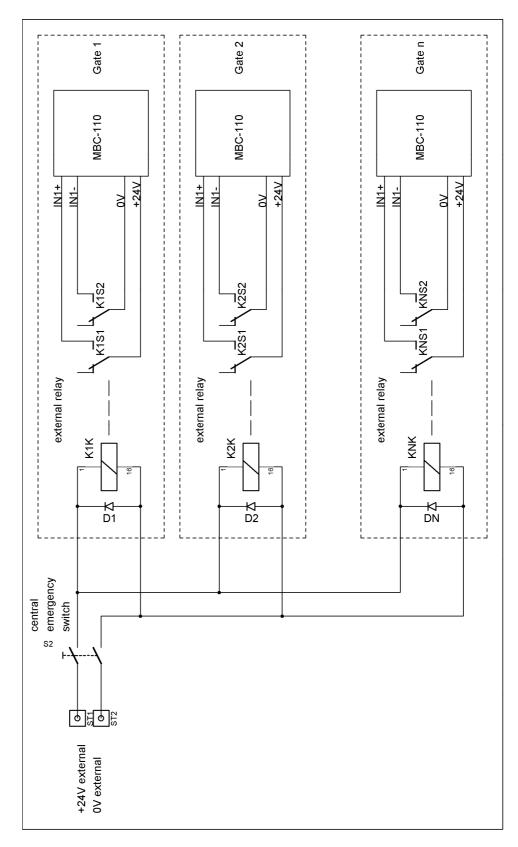


Fig. 18: Connection emergency input



8.4.3 Relay outputs

- Isolated relay contacts, wired in groups
- Switched voltage 5 24V
- Switched current 10 mA to 1 A

Relay output	Function	Description
1	Global error / alarm output	When certain errors occur, an alarm is given at this output; it continues as long as the error persists. See also the following note. Possible errors are:
		Obstruction detected
		Emergency input is interrupted
		CAN communication with end stage is impaired
		Hardware fault in end stage
		Software error in end stage
		Power failure
		Wire breakage in alarm line
2	Tailgating alarm output	At this output, a continuous signal is given if tailgating is detected. The signal remains active until there is only one object in the lane.
3	Wrong-way alarm output	An alarm is given at this output if the lane is entered from the wrong direction. This warning is also given when an object is in the entry zone without clearance for too long with the pedestrian barrier closed. The signal is cancelled as soon as the zone is cleared, or after 15 seconds.
4	Passage counting pulse	When a passage is detected, a counting pulse ca. 400 ms long is given at this output. This also applies in case of free entry/exit mode. Pulses resulting from both directions are counted.
5	Inhibit card reader on entry side	At this output, a card reader on the entry side can be blocked if a passage is requested from the exit side.
6	Inhibit card reader on exit side	At this output, a card reader on the exit side can be blocked if a passage is requested from the entry side.

Table 9: Relay outputs



NOTE!

Relay 1 operation is fail-safe, i.e. a power failure or a wire breakage at the relay output is also indicated at the global error output. This means that the relay contact pair is closed as long as there is no error. As soon as the global error described above occurs, the relay contacts open.



8.4.4 MOSFet outputs

- Not isolated
- Switched voltage 5 to 24V
- Switched current 500 mA

MOSFet output	Function	Description
1	Gate End Display red cross on entry side	This output controls the red cross in the Barrier End Display on the entry side.
2	Gate End Display green arrow on entry side	This output controls the green arrow in the Barrier End Display on the entry side.
3	Gate End Display red cross on exit side	This output controls the red cross in the Barrier End Display on the exit side.
4	Gate End Display green arrow on exit side	This output controls the green arrow in the Barrier End Display on the exit side.

Table 10: MOSFet outputs

8.5 Installing access-control devices

Observe the provided assembly dimensions.

Fig. 19: Maximum installation volume for card reader

Connect access control devices as e.g. card readers to both inputs IN2 and IN3 according to page 42, Fig. 15.

8.6 Post-installation check

The following points have to be checked after the electrical installation of the pedestrian barrier:

- Does the supply voltage match the specification on the type plate?
- Are the pedestrian barriers connected according to wiring diagram?
- Are all screws firmly fixed?
- Have all covers been properly assembled?



9 Configuration of pedestrian barrier

9.1 Safety

Inappropriate configuration

A WARNUNG!



WARNING! Risk of injury due to inappropriate configuration!

Inappropriate configuration can cause severe injuries or to severe injuries.

Therefore:

- The configuration of the control unit may only be carried out by qualified personnel or professional electricians.
- Carry out all operating steps according to the specifications of these operating instructions.
- Before restarting, ensure that all covers are locked properly.

Electric voltage

A DANGER!



DANGER! Mortal danger by electric voltage!

Touching live parts can be lethal.

Damage to the insulation or to individual components can be lethal.

Therefore:

- Switch off the power supply immediately in case of damage to the insulation and arrange repair.
- Only electrical specialists may carry out work on the electrical system.
- Switch off power supply and secure against reactivation before performing any work. Test for absence of voltage!
- Never bypass or deactivate fuses.
- When replacing fuses observe the correct amperage specification.
- Keep moisture and dust away from live parts.
 Moisture or dust may cause a short circuit.

Personal protective equipment

The following must be worn during all configuration work:

- Work clothes
- Protective gloves
- Safety shoes.



9.2 Configuring the pedestrian barrier

Some functions and parameters of the pedestrian barrier can be adjusted via two blocks each equipped with 8 DIP switches. For a detailed description refer to page 55, chapter 9.2.1 and page 53, chapter 9.2.2.

The following adjustments or inspections have to be performed:

- 1. Switch off power supply.
- 2. Adjust the program mode 2 (MPR) via the DIP switches S2.1 and S2.2.
- 3. Set passage direction via DIP switches S2.3 and S2.4.
- 4. Set the "behaviour" when an obstruction is detected via DIP switch S2.8.
- Check DIP switch for CAN bus termination and addressing on all three control units. → See page 76, chapter 12.3.



NOTE!

Changes to DIP switch settings only become effective after the power supply to the pedestrian barrier has been switched off and then on again.

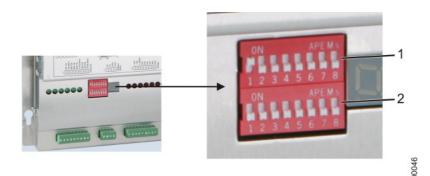


Fig. 20: DIP switch block S1 und S2

- 1 DIP-switch block S1, not used
- 2 DIP-switch block S2



9.2.1 DIP switch block S1

DIP S1.x	Function	Description			
1	Opening pulse storage	When pulse storage is switched off, the barrier can be opened by a pulse at one of the two opening inputs. If further opening pulses are received while the barrier is still open, they are ignored. With opening pulse storage activated, several opening pulses can be stored. The barrier then remains open until the number of stored pulses is again zero. With each passage, the number of stored pulses is reduced by one. Options OFF: No pulse stored ON: Up to 5 opening pulses can be stored			
2	Buzzer	When it is activated, the buzzer gives a warning in certain situations. Continuous tone: during a reference run (homing) or when there is a global error Tone at rapid intervals: on "tailgating" by a second person Tone at slow intervals: for unauthorised access or the unauthorised presence of a person in the light barrier zone Options OFF: Buzzer switched off ON: Buzzer switched on			
3 and 4	Safety delay time	The safety delay time is the maximum time for which the lane remains open after all safety light barriers have been cleared. On expiry of the safety delay time, the barrier closes. The safety delay time has four possible settings. Options DIP S1.4 Safety delay time			
		OFF	OFF	0 s	
		ON	OFF	1 s	
		OFF	ON	2 s	
		ON	ON	3 s	
5 and 6	Hold-open time	The hold-open time is the maximum time for which the lane remains open after an opening signal if there is no one in the lane. On expiry of the hold-open time, the barrier closes if no one has passed through. The hold-open time has four possible settings. Options			
		DIP S1.5	DIP S1.6	Hold-open time	
		OFF	OFF	2 s	
		ON	OFF	4 s	
		OFF	ON	6 s	
		ON	ON	12 s	



DIP S1.x	Function	Description
7	Query software version status	If this function is activated during operation, the version status of the software is displayed cyclically on the 7-segment display. Options
		OFF: Normal operating display
		ON: Version status of software is displayed
8	Reserved	Not used

Table 11: DIP switch block S1



9.2.2 DIP switch block S2

DIP S2.x	Function	Description				
1 and 2	Program mode		The program mode determines which control program is used when power to the barrier is switched on. Options			
		DIP S2.1	DIP S2.2	Program mode		
		OFF	OFF	1 = not valid		
		ON	OFF	2 = MPR		
		OFF	ON	3 = KPH		
		ON	ON	4 = not valid		
3 and 4	Permitted direction of passage	which direction These two DIP IN1 to IN3 of the	Using DIP switches S2.3 and S2.4, you can determine in which direction the pedestrian barrier may be used. These two DIP switches are used together with digital inputs IN1 to IN3 of the MBC-110 to select the operating mode of the pedestrian barrier			
		DIP S2.3	DIP S2.4	Permitted direction of passage		
		OFF	OFF	Passage is not possible in either direction		
		ON	OFF	Passage only permitted in the entry direction		
		OFF	ON	Passage only permitted in the exit direction		
		ON	ON	Passage permitted in both directions		
5	Reserved	Not reserved				
6	Reserved	Not reserved				
7	Reserved	Not reserved	Not reserved			
8	Behaviour when obstruction detected	This DIP switch determines the behaviour of the barrier after a flap has contacted a person or a piece of luggage. Options				
		■ OFF: Flaps continue to press				
		ON: Flaps open immediately and close again at reduced speed depending on the status of the light barriers				

Table 12: DIP switch Block S2



9.3 Selecting the operating mode

All in all choose among 10 operating modes. Set the operating mode via the digital inputs IN1 to IN3 and the DIP switches S2.3 and S2.4.



NOTE!

The pedestrian barrier is always closed when no opening pulse is being processed.

Define the permitted passage direction via both DIP switches S2.3 and S2.4.

It is important to differentiate between free passage and controlled access, e.g. by a card reader.

If a continuous signal is present at an opening input, then free passage is activated for this direction.

Operating mode	IN1 Deactivate motor end- stages	IN2 Opening entry side	IN3 Opening exit side	DIP S2.3	DIP S2.4
Emergency mode	Interrupted	х	x	х	x
Out-of-service mode	+24V	х	х	OFF	OFF
Controlled entry mode	+24V	Impulse	х	ON	OFF
Controlled exit mode	+24V	x	Impulse	OFF	ON
Bidirectional mode	+24V	Impulse	Impulse	ON	ON
Free entry mode	+24V	Continuous signal	Х	ON	OFF
Free exit mode	+24V	х	Continuous signal	OFF	ON
Free entry, controlled exit mode	+24V	Continuous signal	Impulse	ON	ON
Free exit, controlled entry mode	+24V	Impulse	Continuous signal	ON	ON
Fully-free mode	+24V	Continuous signal	Continuous signal	ON	ON

Table 13: Selecting the operating mode

X non-relevant



9.3.1 Emergency

Power to the motors is cut off, the flaps are opened by springs, and the lane is completely clear for passage in both directions.

Entry side	Gate End Display (GED)	Input IN2 Opening entry side	Relay 5 Inhibit card reader	Light barriers LS1 and LS2		
	Green arrow	Not used	Is active	Not used		
Free passage is p	ossible in this direction	١.				
Exit side Gate End Display (GED) Input IN3 Relay 6 Light barriers Opening exit side Inhibit card reader LS5 and LS6						
	Green arrow	Not used	Is active	Not used		
Free passage is possible in this direction.						

9.3.2 Out-of-service mode

The pedestrian barrier is completely blocked for passage in either direction, i.e. the flaps are closed and opening signals are not accepted.

Entry side	Gate End Display (GED)	Input IN2 Opening entry side	Relay 5 Inhibit card reader	Light barriers LS1 and LS2	
	Red cross	Not used	Is active	Are evaluated	
The passage is bl	ocked. Unauthorized a	ccess attempts genera	ate an alarm. $ ightarrow$ See ch	apter 9.4.	
Exit side Gate End Display (GED) Input IN3 Relay 6 Light barriers Opening exit side Inhibit card reader LS5 and LS6					
	Red cross	Not used	Is active	Are evaluated	
The passage is bl	The passage is blocked. Unauthorized access attempts generate an alarm. \rightarrow See chapter 9.4.				



9.3.3 **Controlled entry mode**

The pedestrian barrier is only enabled for passage from the entry direction. Passage from the exit direction is forbidden.

Entry side	Gate End Display (GED)	Input IN2 Opening entry side	Relay 5 Inhibit card reader	Light barriers LS1 and LS2
	Green arrow	Pulses are evaluated	Is switched off	Are evaluated
Tailgating and the unauthorized presence of a person are detected and generate alarms.				

 $[\]rightarrow$ See chapter 9.4.

Exit side	Gate End Display (GED)	Input IN3 Opening exit side	Relay 6 Inhibit card reader	Light barriers LS5 and LS6	
	Red cross	Not used	Is active	Are evaluated	
The passage is bl	The passage is blocked. Unauthorized access attempts generate an alarm. → See chapter 9.4.				

Controlled exit mode 9.3.4

The pedestrian barrier is only enabled for passage from the exit direction. Passage from the entry side is forbidden.

Entry side	Gate End Display (GED)	Input IN2 Opening entry side	Relay 5 Inhibit card reader	Light barriers LS1 and LS2
	Red cross	Not used	Is active	Are evaluated
The passage is bl	ocked. Unauthorized a	ccess attempts genera	ate an alarm. $ ightarrow$ See ch	apter 9.4.
Exit side	Gate End Display (GED)	Input IN3 Opening exit side	Relay 6 Inhibit card reader	Light barriers LS5 and LS6
	Green arrow	Pulses are evaluated	Is switched off	Are evaluated
Tailgating and the unauthorized presence of a person are detected and generate alarms.				

 $[\]rightarrow$ See chapter 9.4.



9.3.5 Bidirectional mode

The pedestrian barrier is enabled for passage from either side.

If a valid opening signal is detected on one side of the pedestrian barrier the Barrier End Display on the other side then switches to "red cross" and access from the other side is blocked. The appropriate output to inhibit the card reader on the other side is set.

Entry side	Gate End Display (GED)	Input IN2 Opening entry side	Relay 5 Inhibit card reader	Light barriers LS1 and LS2
	Green arrow	Pulses are evaluated	Is controlled	Are evaluated

Tailgating, unauthorized access and the unauthorized presence of a person are detected and generate alarms. \rightarrow See chapter 9.4.

Exit side	Gate End Display (GED)	Input IN3 Opening exit side	Relay 6 Inhibit card reader	Light barriers LS5 and LS6
	Green arrow	Pulses are evaluated	Is controlled	Are evaluated

Tailgating, unauthorized access and the unauthorized presence of a person are detected and generate alarms. \rightarrow See chapter 9.4.

9.3.6 Free entry mode

The pedestrian barrier is only enabled for free passage from the entry side. The pedestrian barrier is normally closed. When a person enters the light barriers on the entry side, the pedestrian barrier opens the lane for free passage.

Passage from the exit side is forbidden.

Entry side	Gate End Display (GED)	Input IN2 Opening entry side	Relay 5 Inhibit card reader	Light barriers LS1 and LS2		
	Green arrow	A continuous signal is present	Is switched off	Open the flaps on entry		
There are no unau	uthorized access attem	pts in this direction.				
Exit side Gate End Display (GED) Input IN3 Relay 6 Light barriers Opening exit side Inhibit card reader LS5 and LS6						
	Red cross	Not used	Is active	Are evaluated		
The passage is bl	The passage is blocked. Unauthorized access attempts generate an alarm. → See chapter 9.4.					



9.3.7 Free exit mode

The pedestrian barrier is only enabled for free passage from the exit side. The pedestrian barrier is normally closed. When a person enters the light barriers on the exit side, the pedestrian barrier opens the lane for free passage.

Passage from the entry side is forbidden.

Entry side	Gate End Display (GED)	Input IN2 Opening entry side	Relay 5 Inhibit card reader	Light barriers LS1 and LS2
	Red cross	Not used	Is active	Are evaluated
The passage is bl	ocked. Unauthorized a	ccess attempts genera	ate an alarm. $ ightarrow$ See ch	apter 9.4.
Exit side Gate End Display (GED) Input IN3 Relay 6 Light barriers Opening exit side Inhibit card reader LS5 and LS6				
	Green arrow	A continuous signal is present	Is switched off	Open the flaps on entry
There are no unauthorized access attempts in this direction.				

9.3.8 Free entry, controlled exit mode

The pedestrian barrier is enabled for free passage from the entry side. In the exit direction, access is controlled by an access-control device (e.g. card reader). After the lane has been opened from one side, the Barrier End Display on the other side then switches to "red cross" and access from that side is blocked.

Entry side	Gate End Display (GED)	Input IN2 Opening entry side	Relay 5 Inhibit card reader	Light barriers LS1 and LS2	
	Green arrow	A continuous signal is present	Is activated	Open the flaps on entry	
There are no una	uthorized access attem	npts in this direction.			
Exit side	Gate End Display (GED)	Input IN3 Opening exit side	Relay 6 Inhibit card reader	Light barriers LS5 and LS6	
	Green arrow	Pulses are evaluated	Is controlled	Are evaluated	
Tailgating, unauthorized access and the unauthorized presence of a person are detected and generate alarms. → See chapter 9.4.					



9.3.9 Free exit, controlled entry mode

The pedestrian barrier is enabled for free passage from the exit side. In the entry direction, access is controlled by an access-control device (e.g. card reader). After the lane has been opened from one side, the Barrier End Display on the other side then switches to "red cross" and access from that side is blocked.

Entry side	Barrier End Display (GED)	Input IN2 Opening entry side	Relay 5 Inhibit card reader	Light barriers LS1 and LS2
	Green arrow	Pulses are evaluated	Is controlled	Are evaluated

Tailgating, unauthorized access and the unauthorized presence of a person are detected and generate alarms. \rightarrow See chapter 9.4.

Exit side	Barrier End Display (GED)	Input IN3 Opening exit side	Relay 6 Inhibit card reader	Light barriers LS5 and LS6
	Green arrow	A continuous signal is present	Is activated	Open the flaps on entry
There are no unauthorized access attempts in this direction.				

9.3.10 Fully free mode

The pedestrian barrier is free for passage from both directions, the flaps are open, but, in contrast to the emergency mode, the motors are switched on. Additionally, passage counting pulses are given in this mode.

Entry side	Barrier End Display (GED)	Input IN2 Opening entry side	Relay 5 Inhibit card reader	Light barriers LS1 and LS2	
	Green arrow	A continuous signal is present	Is active	Not used	
Free passage is p	ossible in this direction).			
Exit side	Barrier End Display (GED)	Input IN3 Opening exit side	Relay 6 Inhibit card reader	Light barriers LS5 and LS6	
	Green arrow	A continuous signal is present	Is active	Not used	
Free passage is possible in this direction.					



9.4 Unauthorised access attempts

9.4.1 Attempted unauthorised following (tailgating)

When an unauthorised person (without a ticket) attempts to follow an authorised person (known as "tailgating"), an alarm is triggered at relay output 2 and the buzzer sounds an alarm (rapid tone interval).

Detection of a second person is controlled by a timer setting. It is therefore possible that items of luggage are assumed to be a following person and trigger a false alarm.

9.4.2 Unauthorised access in the blocked direction

If a person tries to enter the lane from the blocked direction, an alarm is triggered at relay output 3 and the buzzer sounds an alarm (slow tone interval). The alarm is cancelled after a delay time if the person steps back out of the pedestrian barrier lane.

If the flaps are already open, they will try to close. Opening pulses that are already stored are retained, but will only be processed again after the unauthorised person has stepped back out of the pedestrian barrier lane.

9.4.3 Unauthorised presence of a person

If a person has entered the pedestrian barrier from the permitted side, but has not triggered an opening signal within 5 seconds (e.g. at a card reader), then an alarm is triggered at relay output 3 and the buzzer sounds an alarm (slow tone interval).

The alarm is cancelled after a delay time if the person steps back out of the pedestrian barrier lane, or if an opening pulse is generated.





10.1 Safety

General

A WARNING!



WARNING!

Danger by inappropriate start-up and operation!

Inappropriate start-up and operation can cause severe injuries or lethal injuries.

Therefore:

- Commissioning and operation must be performed by specialists or electronics specialists.
- Carry out all operating steps according to the specifications of these operating instructions.
- Before restarting, ensure that all covers are locked properly.

Electric voltage

▲ DANGER!



DANGER!

Mortal danger by electric voltage!

Touching live parts can be lethal.

Damage to the insulation or to individual components can be lethal.

Therefore:

- Switch off the power supply immediately in case of damage to the insulation and arrange repair.
- Only electrical specialists may carry out work on the electrical system.
- Switch off power supply and secure against reactivation before performing any work. Test for absence of voltage!
- Never bypass or deactivate fuses.
- When replacing fuses observe the correct amperage specification.
- Keep moisture and dust away from live parts.
 Moisture or dust may cause a short circuit.

Personal protective equipment

The following must be worn during start-up:

- Work clothes
- Protective gloves
- Safety shoes.



10.2 Start-up

Inspection prior to initial start-up

The following inspections must be performed prior to initial start-up:

- Check wiring emergency input IN1.
 - \rightarrow See page 42, Fig. 16 and page 46, Fig. 18.
- Check connection of digital inputs IN2 and IN3.
 - \rightarrow See page 42, Fig. 16.
- Check connection of relays outputs 1 to 6.
 - \rightarrow See page 42, Fig. 16.
- The program mode 2 (MPR) must be set by the DIP switches S2.1 and S2.2. → See page 53, Table 12.



NOTE!

Remember that the safety light barriers are activated during a system start. The flaps can only close when the safety light barriers are clear.

Make sure that, when the power supply is switched on, there are no obstructions to operation of the barrier. The access lane must be clear.

Every time the power is switched on, the flaps go to the closed position. The first closure takes place at reduced speed and serves as a reference run for the system to learn the end positions.

There are three exceptions:

- An opening impulse is present.
- The input "Emergency" to controller MBC-110 is interrupted
- The safety light barriers are not clear.

10.3 Operation

10.3.1 Switching on and off the pedestrian barrier

Switching on

Switch on pedestrian barrier at the mains switch. The mains switch is on the mounting plate "Master". \rightarrow See also page Fehler! Textmarke nicht definiert., Fehler! Verweisquelle konnte nicht gefunden werden..

Switching off

Switch off pedestrian barrier at the mains switch. The mains switch is on the mounting plate "Master". \rightarrow See also page Fehler! Textmarke nicht definiert., Fehler! Verweisquelle konnte nicht gefunden werden.



10.4 Program mode MPR

Default setting fort he pedestrian barrier MPR is the program mode MPR. This one is set by the factory via the DIP switches S2.1 and S2.2. In this program mode the light barriers and the safety light barriers initiate the opening and the closing of the flaps and realise unauthorized access attempts.

The light barriers 1 and 2 as well as 5 and 6 fulfil the following function:

- opening of the flaps if a person enters the freed side
- serve to detect the direction and
- detect unauthorized access attempts.

The safety light barriers 3A and 3B as well as 4A and 4B fulfil the following function:

- safety monitoring
- close flaps if a person passed both light barriers.

Fig. 21: Function of the light barriers



10.5 Normal operation

10.5.1 Power-off state

When the power is off, the motors have no voltage and the lane is free.

10.5.2 Reference run (homing)

When the power supply is switched on, the flaps carry out a reference run. This teaches the system the two end positions. The first closing motion is carried out at reduced speed. From the next closing motion, the flaps move at normal speed.

Because it can happen that there is an object between the flaps during the first closing motion, the outer limit position is taken as a reference point only when a certain minimum angle between the inner and outer stop positions is exceeded. If the minimum angle is not achieved, the control system goes out of service and gives an alarm. A service technician on site must switch the power off and then on again.

10.5.3 Normal operation without pulse storage

At the opening inputs, the lane can be enabled for one passage at each input. On receipt of an opening pulse, the hold-open time starts to expire.

If a passage does not start within the hold-open time, the lane is blocked again. The associated opening signal is then cancelled.

If a passage has started, the system will wait until both safety light barriers are interrupted simultaneously for a short time. In this case the hold-open time is immediately cleared, but the barrier does not yet close. Only when both safety light barriers are clear again does the barrier close immediately, unless a safety delay is active. If a safety delay has been set, it will only start to expire when at least one safety light barrier has been interrupted. Only on expiry of the safety delay time, does the barrier close.

Depending on the setting of DIP switch S2.5, the barrier either opens again, or closes if one safety light barrier is interrupted again during closure.

Without pulse storage, a request for a further passage is ignored as long as an already recognised clearance has not been completed. Only when the barrier has closed again, or the holdopen time has expired, can a new opening pulse be processed.



10.5.4 Normal operation with pulse storage

In this operating mode, up to 5 opening pulses can be stored and processed sequentially in the order in which they occur (only in bidirectional mode).

When at least one request pulse has been stored, the hold-open time starts to expire immediately. As soon as a passage has been completed, the hold-open time restarts if a pulse is still stored.

The pedestrian barrier remains open until the last opening pulse has been processed.

10.6 Special cases within motion sequence

10.6.1 Obstruction detection

Normally, a person in the safety zone is protected by the safety light barriers. It is, however, possible that there is an object (e.g. a suitcase) in the safety zone when the flaps close which, due to its form, is not recognised by the safety light barriers.

The behaviour of the barrier when an obstruction is detected depends on how DIP switch S2.8 is set.

10.6.2 Attempted break-in

When the flaps are in their closed end position, they are blocked (linkage at top-dead-centre). However, should someone succeed in pulling the flaps out of their end position, an alarm is given.

10.6.3 Emergency situation

If the input "emergency" is interrupted during operation, the pedestrian barrier goes immediately to a safe condition, i.e. power to the motors is cut off and springs pull the flaps to the open position. The lane is thus free for passage in both directions.

The control system returns to operation when there is voltage again at the input "emergency".

Maintenance



11 Maintenance

11.1 Safety

General

A WARNING!



WARNING! Danger by inappropriate maintenance!

Inappropriate maintenance can cause severe or lethal injuries.

Therefore:

- All maintenance work must be performed by specialists or electrical specialists.
- Prior to work, ensure that there is sufficient assembly space.
- Pay attention to tidiness and cleanness at the assembly site! Loosely stacked or lying around components and tools are accident sources.
- Before restarting, ensure that all covers are locked properly.

Electric voltage

A DANGER!



DANGER! Mortal danger by electric voltage!

Touching live parts can be lethal.

Damage to the insulation or to individual components can be lethal.

Therefore:

- Switch off the power supply immediately in case of damage to the insulation and arrange repair.
- Only electrical specialists may carry out work on the electrical system.
- Switch off power supply and secure against reactivation before performing any work. Test for absence of voltage!
- Never bypass or deactivate fuses.
- When replacing fuses observe the correct amperage specification.
- Keep moisture and dust away from live parts.
 Moisture or dust may cause a short circuit.





Danger of crushing

▲ CAUTION!



CAUTION! Danger of crushing!

A moving drive unit can cause crushing.

Therefore:

- Block drive unit for maintenance work.
- If work must be carried out at the basic module always disconnect power supply at the neighbouring pedestrian barrier with the master function. The pedestrian barrier with master function could start the pedestrian barrier with the slave function.

Personal protective equipment

The following must be worn during maintenance work:

- Work clothes
- Protective gloves
- Safety shoes.

11.2 Cleaning

NOTICE!



NOTICE!

Unit damage possible!

Aggressive cleaning agents and substances can damage or destroy electrical cables and components.

Therefore:

Do not use cleaning agents with aggressive ingredients.

Maintenance



Carrying out cleaning work:

- 1. Switch off power supply and secure against restarting.
- 2. Remove soiling appropriately.
 - Use a water-in-oil emulsion spray as cleaning agent. We recommend the stainless steel care spray of the company 3M
 - If necessary, pre-clean surface with a damp cloth and dry carefully.
 - Spray surface evenly and thinly with stainless steel care.
 - Clean surfaces with a dry and clean one way cloth. Never use wet cloth.
- 3. Clean all glass parts with damp cloth.
- 4. Absorb lubrication and grease deposits with absorbing materials.
- 5. Remove dust inside the cabinets with a vacuum cleaner.
- 6. After cleaning work, check that all previously opened covers are closed again and that all safety equipment function correctly.





11.3 Maintenance schedule

The following describes the maintenance work that is necessary for optimal, trouble-free operation. Maintenance intervals must be observed.

If increased wear of individual components or functional groups is revealed during regular inspections, the operator must reduce the required maintenance intervals on the basis of the actual signs of wear.

In case of queries regarding the maintenance work and intervals: contact the manufacturer (service address \rightarrow page 2).

Interval	Maintenance work	To be carried out by
Monthly	Check all parts for damages and sharp edges.	Operator
	Visual inspection of the housing in and outside for damage. If necessary, clean housing and correct defect in paint work.	Specialist
Every 6 months	Check fixing of the flaps.	Operator
	Check function of the residual current operated device	Electrical specialists
	Check function of safety installations as e.g. light barriers.	Electrical specialists
Every 12 months	Check electric cables for damages.	Electrical specialists
	Check if all electrical connections are firm.	Electrical specialists
	Check rubber buffers and replace if necessary.	Specialist
	Check signs and labels for legibility.	Operator
	Check foundation fastening.	Specialist

Table 14: Maintenance schedule

Malfunctions



12 Malfunctions

This chapter describes possible causes of malfunctions and trouble shooting tasks.

Contact the manufacturer in case of malfunctions that cannot be repaired by means of the following information $(\rightarrow page 2)!$

12.1 Malfunction table – Pedestrian barriers

Malfunction	Possible cause	Corrective action	To be carried out by
Flaps move too	Motor is overheated.	As soon as the motor has cooled down,	_
slowly.	l²t surveillance has reduced speed to protect the motor.	the speed will return to normal.	_
	A mechanical obstruction disables the movement.	Remove obstruction.	Operator
One or both flaps do not move.	Cabling inaccurate or defective. Green LEDs must be permanently illuminated at both MMC-	Green LED is switched off: Check that there is +42V between terminals DC+ and DC If not, check the wiring and power supply.	Electrical specialist
	120.	Green LED blinks: Safety input signal is missing: Check that there is 24V at input IN1 of MBC-110 (red LED on IN1 must be illuminated). Check that the CAN cables between the controllers are not damaged. Check that the CAN addresses on all controllers are correctly set. Check that the CAN termination resistors on all controllers are correctly set.	Electrical specialist
	Check if one or both MMC-120's are showing an error.	The red LED shows the error code: Count the number of blink impulses and look up the error code. → See Table 19.	Specialist / Electrical specialist
	Check if the MBC-110 display is showing an error.	Read the error code in the display: Look up the error code. → See Table 16.	Specialist / Electrical specialist
	Emergency input has possibly been interrupted. Red LED at IN1 of the MBC-110 must be illuminated.	If the red LED is not illuminated, check the emergency input.	Specialist
	Light barrier covered.	Remove obstruction.	Operator



Malfunctions

Malfunction	Possible cause	Corrective action	To be carried out by
One or more light barriers do not operate	Wiring incorrect or light barriers defective.	Orange supply voltage LEDs must be illuminated on transmitter and receiver. Green status LED on receiver must change state when the light barrier is interrupted by passing your hand through it. The status of light barriers LS 1, LS 2, LS 5 and LS 6 can also be checked at the appropriate red LEDs at inputs IN4 to IN7 of controller MBC-110.	Electrical specialist
Gate End Display does not work.	Incorrect connection of the Barrier End Display.	Check wiring and connection of the Gate End Display.	Electrical specialist

Table 15: Malfunction table – pedestrian barrier



NOTE!

Additionally, dispose of the diagnostic program MBC Diag for further diagnostics. Use this program to read-out each error status from the MBC-110 and the associated MMC-120. For further information contact your authorised dealer or MAGNETIC directly.

Malfunctions



12.2 Malfunction – Logic controller MBC-110

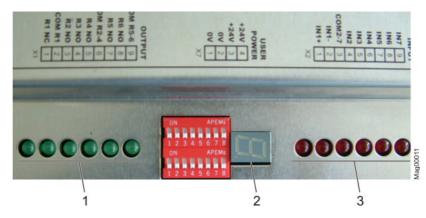


Fig. 22: LEDs on the logic controller MBC-110

- 1 Green LEDs indicate the switching status of the customer interface outputs
- 2 One-digit display
- 3 Red LEDs indicate the switching status of the customer interface inputs

The customer interface inputs and outputs of the MBC-110 indicate their switching status through LEDs.

- Red LED is switched on: Input is activated.
- Red LED is switched off: Input is not activated.

12.2.1 Display of the error codes at the MBC-110

If the DIP switch S1.7 is OFF (factory setting), the display shows an error code in case of an error. See also page 52, Table 11.

During normal operation mode the point continuously flashes at 0.5 Hz.

Error codes are shown in the one-digit display of the MBC-110. The characters of the error codes are displayed one after another.

The error code E05 is displayed as follows:

- 1. E (Error)
- 2. Pause
- 3. 0
- 4. Pause
- 5. 5
- 6 Pause
- 7 Step 1 to 6 is repeated.

Example

72





Example

12.2.2 Display of the software version of the MBC-110

If the DIP switch S1.7 is ON the display shows the current

software. See also page 52, Table 11.

The characters of the error code are displayed one after another.

The characters are displayed for 2 seconds.

The software version 1.4 is displayed as follows:

1. ι

2. 1. (first character with point)

3. 4 (second character)

4. Pause

5. Step 1 to 4 is repeated.

12.2.3 Error codes of the MBC-110

Error code	Description	Corrective action	To be carried out by
E02 ¹⁾	Emergency input IN1 is interrupted The signal at IN1+ or IN1- has been interrupted, e.g. by an external fire alarm system.	Check if the wires to IN1+ or IN1- are broken or if the input was actually interrupted by an external safety system.	Electrical specialist
E03 ¹⁾	Safety light barrier interrupted during reference run The reference run cannot be carried out because at least one safety light barrier is covered.	Remove obstruction.	Electrical specialist
E04 ¹⁾	Attempted break-in Someone has attempted to force one or both flaps out of its closed end position.		Electrical specialist
E05 1)	Obstruction detection An obstruction has been detected.		Electrical specialist
E06 ¹⁾	Unauthorised access The passage was entered in the wrong direction. Someone has attempted to pass through the barrier in the wrong direction, or a person has stayed too long in the entry zone without generating an opening signal.		Electrical specialist
E07 ¹⁾	MBC-110 reset by Watchdog The MBC-110 has detected a program sequence error and has been restarted by Watchdog.		Electrical specialist



Error code	Description	Corrective action	To be carried out by
E09 ¹⁾	Following by a second person (tailgating) detected An unauthorised person has been detected attempting to follow an authorised person. This error can also occur when, for example, a large piece of luggage is detected as a following person.		Electrical specialist
E20 ²⁾	Check sum error in program memory	Device must be newly programmed or sent to MAGNETIC for repair.	Electrical specialist
E21 ²⁾	MMC-120 detected with wrong software At least one MMC-120 has been found to have the wrong application software.	Download application software from MBC-110 to MMC-120.	Electrical specialist
E22 ²⁾	MMC-120 detected with wrong software At least one MMC-120 has been found to have the wrong application software.	Download application software from MBC-110 to MMC-120.	Electrical specialist
E30 ²⁾	Error downloading from MBC-110 to MMC-120 Software in the MMC-120 could not be deleted.	If necessary repeat download for several times.	Electrical specialist
E31 ²⁾	Error downloading from MBC-110 to MMC-120 No communication with MMC-120 boot loader.	If necessary repeat download for several times.	Electrical specialist
E32 ²⁾	Error downloading from MBC-110 to MMC-120 Re-programming of MMC-120 does not work.	If necessary repeat download for several times.	Electrical specialist
E33 ²⁾	Error downloading from MBC-110 to MMC-120 Error when activating new MMC-120 software.	If necessary repeat download for several times.	Electrical specialist
E40 ²	Minimum angle not achieved on reference run During a reference run (homing), the flap mechanism must move through a minimum angle, otherwise the reference run cannot be completed.	Remove obstruction.	Electrical specialist
E41 ²⁾	Invalid program mode set DIP switches S2.1 and S2.2 are set to an invalid program mode.	Select program mode MPR. See page 53, Table 12.	Electrical specialist



Error code	Description	Corrective action	To be carried out by
E42 ²⁾	MMC-120 cannot be activated when starting At least one MMC-120 cannot be activated by the CAN bus during a program start.	CAN communication between MBC-110 and MMC-120 is malfunctioning, error at MMC-120	Electrical specialist
E43 ²⁾	Error in MMC-120 detected during operation At least one MMC-120 has detected an internal error.	Read error code via LEDs of MMC- 120. Correct cause. → See page 79, Table 19	Electrical specialist
E60 ²⁾	Error when initialising CAN protocol stack Internal software error in MBC-110		Electrical specialist
E61 ²⁾	Error when initialising CAN bus CAN bus is blocked, e.g. by a short circuit in the CAN cable.	Correct short-circuit at CAN-cable.	Electrical specialist
E62 ²⁾	No communication with MMC-120, MMC-120 in operation CAN cable broken.	Check CAN cable. DE /EN	Electrical specialist
	Plug not correctly inserted.	Insert plug correctly.	
	Wrong CAN address set	Set correct CAN-address.	
	Termination resistors not correctly set.	Set termination resistors correctly.	
	There is an old firmware on one or both of the MMC-120	Download software from MBC-110 to MMC-120.	
E64 ²⁾	MMC-120 does not answer, MMC-120 in operation		Electrical specialist
E65 ²⁾	See Error E62 for possible causes EEPROM error in MBC-110 The EEPROM memory in MBC-110 could not be read or written in.	Possibly hardware error in MBC-110	Electrical specialist
E66 ²⁾	Checksum error in parameter memory	Hardware defect, send the unit to MAGNETIC for repair.	Electrical specialist
E70 ¹⁾	Error in light barrier LS 1 Light barrier covered for longer than 30 seconds. Light barrier dirty or defective.	Check light barrier.	Electrical specialist
E71 ¹⁾	Error in light barrier LS 2 Light barrier covered for longer than 30 seconds. Light barrier dirty or defective.	Check light barrier.	Electrical specialist
E72 ¹⁾	Error in light barrier LS 3A / 3 B Light barrier covered for longer than 30 seconds. Light barrier dirty or defective.	Check light barrier.	Electrical specialist



Error code	Description	Corrective action	To be carried out by
E73 ¹⁾	Error in light barrier LS 4A / 4B Light barrier covered for longer than 30 seconds. Light barrier dirty or defective.	Check light barrier.	Electrical specialist
E74 ¹⁾	Error in light barrier LS 5 Light barrier covered for longer than 30 seconds. Light barrier dirty or defective.	Check light barrier.	Electrical specialist
E75 ¹⁾	Error in light barrier LS 6 Light barrier covered for longer than 30 seconds. Light barrier dirty or defective.	Check light barrier.	Electrical specialist

Table 16: Error codes of the MBC-110

12.3 CAN bus addressing and termination

The MBC-110 logic controller and the two MMC-120 motor controllers exchange data via a CAN bus.

Each of the controllers must have a fixed CAN address assigned to it. Additionally, a termination resistor must be activated at both ends of the bus to prevent interference.

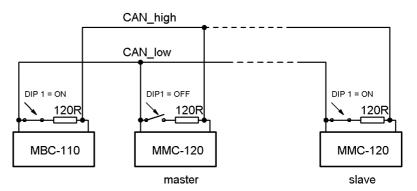


Fig. 23: CAN bus termination

Each controller is equipped with a DIP switch block. The termination is activated or deactivated using DIP switch 1. The CAN addresses are set using the DIP switches 2 to 4 of each controller.

¹⁾ Self-resetting error: The pedestrian barrier is still operating. The error code is displayed as long as the error is pending. If the error is corrected, the error code is displayed again for a max of another 10 seconds.

²⁾ Non-self-resetting error: The pedestrian barrier is out of operation. The error code is shown as long as the error is pending.



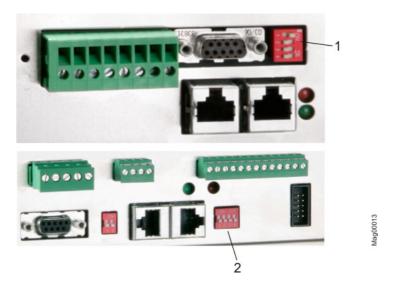


Fig. 24: DIP switches for CAN bus addresses and termination

- 1 DIP switch o MMC-120 Master and MMC-120 Slave
- 2 DIP switch of MBC-110 Master

The DIP switches must be set according to the following table:

Function	DIP switch	MBC-110 Master	MMC-120 Master	MMC-120 Slave
Termination	1	ON	OFF	ON
CAN address	2	OFF	OFF	ON
	3	OFF	OFF	ON
	4	OFF	OFF	ON

Table 17: Setting of the DIP switches

12.4 Malfunction – Motor controller MMC-120



Fig. 25: LEDs on MMC-120

- 1 Green LED for indication of the power supply state and the safety input state
- 2 Red LED for error diagnosis



LED	Description	Possible cause / Corrective action	To be carried out by
Green LED is OFF.	No power supply	Check power supply.	Electrical specialist
Green LED is flashing	Power supply is present. Safety input signal is missing.	Missing signal at emergency input IN1 of the MBC-110. CAN connection between MBC-110 and MMC-120 defective.	Electrical specialist
Green LED is ON.	Normal operation	-	-
Red LED is OFF	No error code	-	-
Red LED is ON.	External error with emergency stop	Check for error in MBC-110 or other MMC-120.	Electrical specialist
Red LED is flashing	Error Number of blink impulses indicates the error code.	→ See Table 19.	Electrical specialist
Red and green LED are ON	Application program has been erased. Boot loader is waiting for downloading the application program.	Download has been interrupted. See the following Section "Downloading application program".	Electrical specialist

Table 18: Description of the LEDs on the MMC-120

Downloading application program

If the red and green LED of both MMC-120 is ON, it is not possible to download the software from the MBC-110 to the two MMC-120. The MBC-110 wrongly detects two boot loaders.

Carry out the following procedure:

- 1. Disconnect the MMC-120 of the pedestrian barrier with the slave function from the CAN bus.
- 2. Download software from the MBC-110 to the connected MMC-120.
- 3. Switch off power supply.
- 4. Re-connect the MMC-120 of the pedestrian barrier with the slave function.
- 5. Switch on power supply.
- 6 Download software from the MBC-110 to the MMC-120 of the pedestrian barrier with slave function.



Error code	Description	Possible cause
2	Resolver error	Plug not properly inserted, short circuit
4	Motor phase error	Motor cable not connected. Wiring defective.
5	Lifeguarding CAN	CAN communication with MBC-110 interrupted
6	Short circuit to ground	Short circuit between motor phase and ground
7	Motor phases shorted	Short circuit between two motor phases
8	DC bus Over-voltage	DC bus voltage too high (> 56 V)
9	DC bus Under-voltage	DC bus voltage too low (< 17 V)
11	Over-temperature end-stage	Heat sink temperature too high (> 80 °C)
20	I ² t surveillance motor	Motor overloaded

Table 19: Error codes of the MMC-120

Repair



13 Repair

13.1 Safety

General

▲ WARNING!



WARNING! Danger by inappropriate repair!

Inappropriate repair can cause severe or lethal injuries.

Therefore:

- All repair work must be performed by specialists or electrical specialists.
- Prior to work, ensure that there is sufficient assembly space.
- Pay attention to tidiness and cleanness at the assembly site! Loosely stacked or lying around components and tools are accident sources.
- Only use original spare parts or spare parts approved of by MAGNETIC. Procure spare parts from your dealer or directly from the manufacturer. For the address, see invoice, delivery note or the reverse of these instructions.
- After completion of repair work, ensure that all covers are correctly mounted.



Electric voltage

▲ DANGER!



DANGER!

Mortal danger by electric voltage!

Touching live parts can be lethal.

Damage to the insulation or to individual components can be lethal.

Therefore:

- Switch off the power supply immediately in case of damage to the insulation and arrange repair.
- Only electrical specialists may carry out work on the electrical system.
- Switch off power supply and secure against reactivation before performing any work. Test for absence of voltage!
- Never bypass or deactivate fuses.
- When replacing fuses observe the correct amperage specification.
- Keep moisture and dust away from live parts.
 Moisture or dust may cause a short circuit.

Danger of crushing





CAUTION! Danger of crushing!

A moving drive unit can cause crushing.

Therefore:

- Block drive unit during maintenance work
- During work at basic module always disconnect the power supply of the neighbouring pedestrian barrier with master function. The drive unit of the pedestrian barrier with master function could be restarted by the drive unit of the pedestrian barrier with slave function.

Personal protective equipment

The following must be worn during all repair work:

- Work clothes
- Protective gloves
- Safety shoes.



13.2 Spare parts





WARNING!

Risk of injury by incorrect spare parts!

Incorrect or defective spare parts can result in damage, malfunctions or total failure and also impair safety.

Therefore:

Use only the manufacturer's original spare parts.

Procure spare parts from authorised dealers or directly from the manufacturer. Refer to page 2 for address.

13.3 Changing motor controller MMC-120

- 1. Switch off power supply. Ensure that the system is powered down. Secure against reactivation.
- 2. Switch off pedestrian barrier via the mains switch of the mounting plate "Master".
- Note position of DIP switches. The DIP switches set the CANaddress and the termination resistance is activated or deactivated.
- 4. Disconnect cables.
- Replace motor controller MMC-120.
- Re-connect cables. Set DIP switches to previous setting.
 → See page 76, chapter 12.3.
- 7. Switch on power supply.
- 8. Download software from logic controller to the motor controller MMC-120.



13.4 Changing logic controller MBC-110

- 1. Switch off power supply. Ensure that the system is powered down. Secure against reactivation.
- 2. Switch off pedestrian barrier via the mains switch of the mounting plate "Master".
- Note position of all DIP switches. The DIP switches set the CAN-address and the termination resistance is activated or deactivated.
- 4. Disconnect cables.
- 5. Replace logic controller MBC-110.
- 6. Re-connect cables. Set DIP switches to previous setting. See your notes. → See page 76, chapter 12.3.
- 7. Switch on power supply.
- 8. Download software from the MBC-Flasher program to the logic controller MBC-110. See separate operating instructions "MBC-Flasher" for the operation.
- 9. Download software from logic controller to the motor controller MMC-120.

13.5 Downloading or updating software to the MBC-110 and MMC-120 controllers



NOTE!

Use the software MBC-Flasher to update the software of the MBC-110. The software of the MBC-110 always includes the appropriate software for the MMC-120.

For further information contact your authorized dealer or MAGNETIC directly.

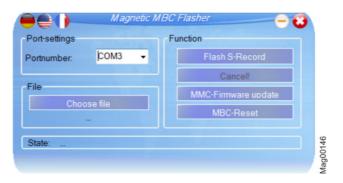


Fig. 26: MAGNETIC MBC-Flasher

Repair



- 1. Download software from the MBC-Flasher program to the logic controller MBC-110. See separate operating instructions "MBC-Flasher" for the operation.
- 2. Download software from logic controller to the motor controller MMC-120. If an error appears during download from MBC-110 to the MMCs-120, see page 73, chapter 12.2.3 and page 77, chapter 12.4.



NOTE!

If the downloaded software to the MBC-110 is newer than the previous one, it may be necessary to download the new software also to the motor controllers MMC-120.



NOTE!

After replacing a controller, you may have to download the controller software.



Decommissioning and disposal

14 Decommissioning and disposal

A barrier module that is no longer usable should not be recycled as a complete unit, but disassembled into individual components and recycled according to material types. Non-recyclable materials have to be disposed of in an environmental-friendly manner.

- Prior to decommissioning and disposal of the barrier module, it must be completely separated from the surrounding units.
- The disassembly and disposal of the barrier module may only be carried out by specialised staff.
- The barrier module has to be disposed of in accordance with the respective country-specific regulations.



NOTE!

For expert information regarding disposal of electric equipment contact MAGNETIC or competent electricians.

EC-Declaration of conformity



15 EC-Declaration of conformity

Der Hersteller/ manufacturer

MAGNETIC Autocontrol GmbH

Grienmatt 20 - 28 +49 (0) 7622 / 695-5 **Telefon** D-79650 Schopfheim **Telefax** +49 (0) 7622 / 695-602

Dokumentationsbevollmächtigter/ Documentation Engineer

Herr Stefan Wellinger **Telefon** +49 (0) 7622 / 695-719

erklärt hiermit für das von ihm gelieferte Produkt/ this is to certify that the delivered product

Personenschleuse MPR/ pedestrian gate MPR Bezeichnung / designation

Typ/ type MPR 112* Ab Serien-Nr./ from serial no. F05392073

die Konformität nach/ corresponds to the conformity of

Richtlinie/ directive 2006/42/EG (Machinenrichtlinie/ machine directive) Richtlinie/ directive 2004/108/EG (EMV-Richtlinie/ EMC directive)

Angewandte harmonisierte Normen (oder Teile daraus)/ Realized harmonized norms (or parts of them):

EN ISO 12100-2 (2004-04)

Sicherheit von Maschinen – Grundbegriffe, allgemeine Gestaltungsleitsätze – Teil 2: Technische Leitsätze/ Safety of machinery - basic concepts, general principles for design - Part 2: Technical principles

EN 60204-1 (2007-06)

Sicherheit von Maschinen – Elektrische Ausrüstung von Maschinen – Teil 1: Allgemeine Anforderungen/ Safety of Machinery - Electrical Equipment of Machines - Part 1: Specifications for General Requirements

EN 61000-6-2 (2006-03)

Elektromagnetische Verträglichkeit (EMV) – Teil 6-2: Fachgrundnormen – Störfestigkeit für Industriebereich/ Electromagnetic compatibility (EMC) - Part 6-2: Generic standards - Immunity for industrial environments

EN 61000-6-3 (2007-09)

Elektromagnetische Verträglichkeit (EMV)- Teil 6-3: Fachgrundnormen – Störaussendung für Wohnbereich, Geschäfts- und Gewerbebereiche sowie Kleinbetriebe/ Electromagnetic compatibility (EMC) -Part 6-3: Generic standards - Emission standard for residential, commercial and light-industrial environements

Diese Erklärung ist keine Zusicherung von Eigenschaften im Sinne des Produkthaftungsgesetzes. Die Sicherheitshinweise der Betriebsanleitung sind zu beachten./ This declaration is not a guarantee of characteristics in the sense of product liability law. The safety regulations of the operating instructions/maintenance instructions have to be observed.

Schopfheim, den 09.05.2011

Ort und Datum/ place and date

1. V. Willinge Steller. Unterschrift/ signature





16 Appendix

16.1 Wiring diagram

Wiring diagram refer to separate appendix.

Index



Index

Α		Н
Access doors		Hazard notes
Access-control devices	48	Homing
Assembly		Housing
Post-installation check	37	•
Required steps	34	I
Assembly on the foundation	36	Identification
Attempted break-in	65	Installation
C		Post-installation
CAN bus addressing	76	Required step
CAN bus addressing CAN bus termination		Instructed people
		Intended use
Cleaning		L
Control system		Lane configuration
Control wiring		Liability
Control wiring		Light barriers
Customer service		Function
	10	
D		М
Decommissioning	85	Maintenance
Design	25	Maintenance scl
Digital inputs	44	Malfunction
Dimensions		Logic controlle
DIP switch block S1		Motor controlle
DIP switch block S2	53	Pedestrian ba
Disclaimer	10	Malfunctions
Display elements	28	MBC-110
Disposal	85	Connecting cu
E		Display error
EC-Declaration of conformity	96	Display softwa
Electrical connection		Malfunction
Post-installation check		MMC-120
Technical data		Malfunction
Electrical specialists		MOSFet outputs
Emergency		0
Emergency input		Obstruction dete
Empty		Occupational sa
Empty conduits		Operating condit
Environmental protection		Technical data
•	• •	Operating instru
F		Operating mode
Flaps	25	Operating perso
Foundation34,	35	Requirements
Foundation plan	35	Operation
Function	27	P
G		•
Gate End Display (GED)25,	28	Pedestrian gate
General25,		Performance da
	,	Technical data

Н	
Hazard notes	15
Homing	64
Housing	37
I	
Identification	19
Installation	
Post-installation check	37
Required steps	
Instructed people	13
Intended use	12
L	
Lane configuration	25
Liability	
Light barriers	
Function	63
M	
Maintenance	66
Maintenance schedule	69
Malfunction	
Logic controller MBC-110	72
Motor controller MMC-120	
Pedestrian barrier	
Malfunctions	70
MBC-110	
Connecting customer's control wiring	
Display error codes	
Display software version	
Malfunction	72
MMC-120 Malfunction	77
MOSFet outputs	
0	40
	٥.
Obstruction detection	
Occupational safety14, Operating conditions	15
Technical data	23
Operating instructions	
Operating mode	
Operating personnel	٠.
Requirements	13
Operation 62,	
P	
Pedestrian gate (module)	25
Performance data	_
Technical data	23



Index

4
8
5
3
5
4
7
2
_
2
2
9
9
986
9 8 6
9 8 6 1 1
2 9 8 6 0 1 9

Start-up	62
Storage	31
Switching off	
Switching on	
Т	
Tailgating	60
Technical data	
Transport	31
Transport inspection	
Type code	
Type plate	
U	
Unauthorised access attempts	60
Unpacking	
W	
Warning notes	8
Warranty	
Weight	
•	24
Technical data Wiring diagram	

Index





MAGNETIC Autocontrol GmbH Grienmatt 20 79650 Schopfheim Germany

Tel.: +49 7622 695 5 Fax: +49 7622 695 602

e-mail: info@ac-magnetic.com